



Step 1: Set-up white steel support pole.

- Brush away the top layer of dry sand.
- Push pole into sand then pull it out. Shake out the sand that has collected in the pole.
- Repeat the process until the depth of the pole reaches the line.



Step 2: Cover the base of the pole with sand.




Step 3: Unroll the Sun Sail & connect the two crossbars.

Step 4: Once the crossbar is connected, close the Velcro end to hold it in place.




Step 5: Connect the extension pole into the "T" at the junction of the cross bars.

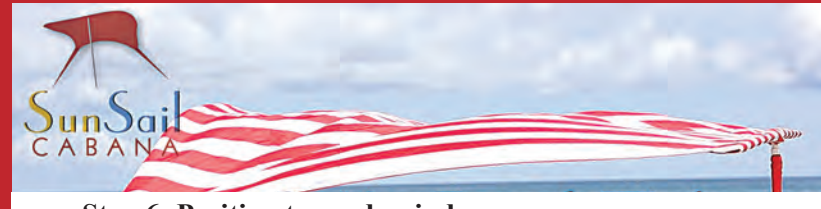

Step 6: Position towards wind.



Step 7: Fill each tail with half bag of sand.

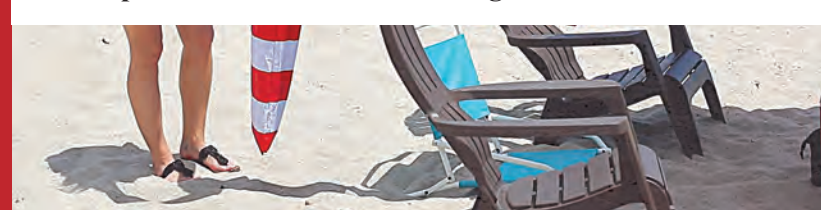

Step 8: Spread out sand bags.



Step 9: ENJOY THE BEACH!

